



SEKONIC L-308S Quick Guide

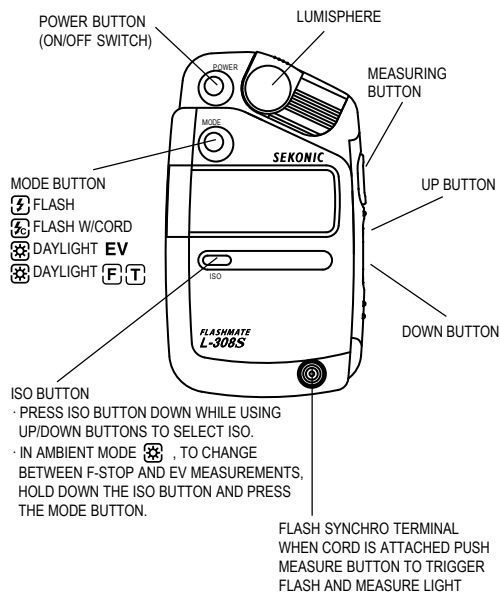

LCD SCREEN

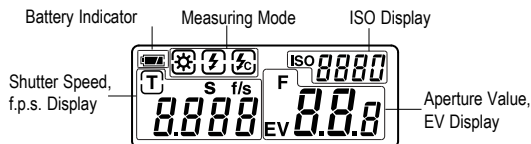

SEKONIC L-308S Basic Operation

Set ISO

While holding down ISO button, press the Up/Down buttons.

Use as Reflected Meter

Slide Lumisphere away to expose meter cell.

Use as Incident Meter

Slide Lumisphere over meter cell.

Measure Brightness /Contrast Difference

Clip in flat Lumidisc over meter cell.

Ambient Reading

Select Ambient Mode, press Measuring button.

Cordless Flash Reading

Select Cordless Flash Mode, press Measuring button to manually trigger the flash.

Flash Reading Using Flash Cord

Select Flash with Cord Mode, connect flash synchro cord into PC socket and press the Measuring button.

EV Reading

Select EV Ambient EV Mode. In Ambient Mode, change between F/Stop and EV readout by holding down ISO button and pressing Mode button.

To Set Increments of Reading

1. Turn power off.
2. Press down Mode button while turning on meter.
3. Press Mode button to select Full, 1/2 or 1/3 f-stop increment reading.
4. Turn power off and then back on to activate functions.